




XR ResponseCard RF User's Guide

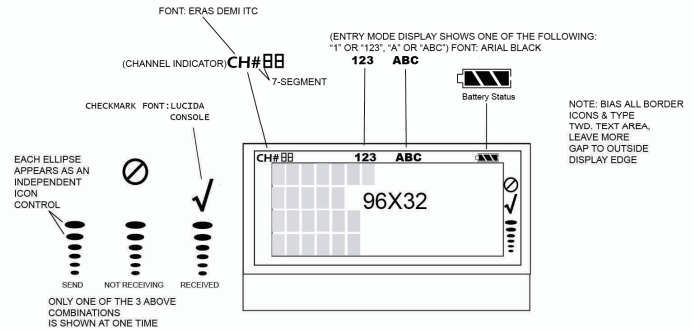

DRAWING IS APPROX. 2X ACTUAL SIZE
(see Adobe Illustrator file)

RGM DESIGN LLC FOR RESPONSIVE INNOVATIONS LLC
LCD ICON DESIGN & PLACEMENT GUIDE 2-25-07

PRODUCT SPECIFICATIONS:

Enclosure

- Lightweight, compact, card format
- Dimensions: 4.0"L x 2.5"W x 0.75"H
- Weight: 2.0 oz (with batteries)
- Angled LCD screen for optimum viewing
- Durable, rugged case ensures maximum longevity under extreme conditions

User Input

- 20 Key (1(A) - 10(J)), Answer Mode, Go To, Enter, Yes, No, Menu, Select, Clear, +/-, .(decimal)

Display

- Easy to read LCD Display
- Dimensions: 50mm x 20mm viewable area
- Display Features: Channel Number, Battery Life Indicator, Answer Choice, Response Confirmation

Power & Power Management

- Powered by two AAA batteries
- Average battery life is 6 to 12 months

SENDING USER DATA:

1. Press MENU
2. Highlight "SEND USER DATA"
3. Press ENTER
4. The next screen will show you which channel the ResponseCard is programmed to. If this is the correct channel press ENTER. If you need to enter a different channel number use the numeric keys to enter your channel.
5. Press ENTER when the correct channel number is entered.
6. Your screen will show
Channel Changed

Receiver Found
7. After the ResponseCard finds your channel the screen will display:
User Data
Send Successful.

EDITING USER DATA:

1. Press MENU
2. Highlight "SETUP" (Use the YES button for down and the NO button for up.)
3. Press ENTER
4. Highlight "User Data" from the sub-menu
5. Press ENTER
6. Select "2" to Edit User Data
7. Press "1" to edit your First Name
Your screen will display the following:
Enter First Name
FGHIJKLMNOPQRSTU
<
32 Left
7. To choose a letter use the 1/A button to scroll left and the 3/C button to scroll right. While the cursor is on the letter you'd like to use press the SEL button.
8. Your choice will appear on the next line in front of the < and the number left will decrease by 1 each time.
9. Press ENTER when you are finished
Your screen will look like this:
First Name

Send Now?
(Y/N)
10. Press the NO button on your ResponseCard
11. Select "2" to edit your Last Name
12. Repeat steps 7 through 9
13. Select "3" to edit your User ID
14. Repeat steps 7 through 9

SENDING RESPONSES IN PRESENTATION MODE:

**To be used during a live presentation when the speaker wants immediate feedback from the audience.*

1. Press MENU
2. Highlight "Presentation" (Use the YES button for down and the NO button for up.)
3. Press ENTER
4. Your screen will display the following:
Presentation
Mode
Channel Number
5. Press the button on the ResponseCard that corresponds to your answer choice
6. Your answer can be verified on your screen after you make your selection.
Your Answer:

1/A
7. The checkmark will appear on the right-hand side of your screen confirming your answer was received.
**If you receive a message stating:
Not accepting answers!
This means that polling was closed and you may not have answered the question. If you sent a successful answer before polling closed, then TurningPoint will accept the last successfully transmitted answer.*

CREATING A TEST/HOMEWORK ASSESSMENT:

- 1. Press MENU
- 2. Highlight “Test/Homework” (Use the YES button for down and the NO button for up.)
- 3. Press ENTER
- 4. Press ‘1’ for New Session
- 5. You will now be prompted to enter your Control Number:
Enter Control #:
VWXYZ 0123456789
<
**You can not edit a test if the control number starts with “1.”*
- 6. Press ENTER once you’ve entered the control number
- 7. The ResponseCard will prompt you to verify you’ve entered the correct information.
Control Code:
012
Is This Correct?
(Y/N)
- 8. Select YES
- 9. You are now in the Test/Homework screen
Question: 001
- 10. Enter the corresponding answer to the test/homework questions. You will receive confirmation that the answer is being stored.
- 11. Repeat step 10 until all of the questions are answered. The maximum number of answers that can be stored is 100.
- 12. Press MENU when you have completed the assessment.
- 13. You will be prompted to leave Test Mode. Choose YES or NO
- 14. You then have the following options
Save/Send Test?
1-Send
2-Save
3-Delete
- 15. Select 2 to save the assessment and transmit at a later time

**To submit the assessment immediately Press 1 to send to the host computer.*

EDITING A TEST/HOMEWORK ASSESSMENT:

- 1. Press MENU
- 2. Highlight “Test/Homework” (Use the YES button for down and the NO button for up.)
- 3. Press ENTER
- 4. Press 2 for “Manage Session”
- 5. Use the YES button to scroll down to select your test
**You can not edit a test if the control number starts with “1.”*
- 6. Press ENTER when the test you want to edit is highlighted
- 7. Press 3 to “Edit Session”
- 8. You can now use the YES and NO buttons to scroll through your test. You could also use the “Go To” button on the ResponseCard that looks like a pencil.
A. Press the “Go To” button
B. Enter the 3-digit question number
Ex. 004
- 9. To change the answer for the question you selected, press a button on the ResponseCard that corresponds to your new answer choice
- 10. Once all of your changes are made press MENU
- 11. You will be prompted to leave Test Mode. Choose YES or NO
- 12. You then have the following options
Save/Send Test?
1-Send
2-Save
3-Delete
- 13. Select 2 to save the assessment and transmit at a later time

**To submit the test immediately Press 1 to send to the host computer.*

SUBMITTING A SAVED TEST/HOMEWORK ASSESSMENT:

- 1. Press MENU
- 2. Highlight “Test/Homework” (Use the YES button for down and the NO button for up.)
- 3. Press ENTER
- 4. Press 2 for “Manage Session”
- 5. Use the YES button to scroll down to select your test
- 6. Press ENTER when the test you want to edit is highlighted
- 7. Press 1 to Send Session
- 8. You will receive confirmation that your test has been submitted

CHANGE CHANNEL:

- 1. Press MENU
- 2. Highlight “Change Channel” (Use the YES button for down and the NO button for up.)
- 3. Press ENTER
- 4. The next screen will show you which channel the ResponseCard is programmed to. Use the numeric keys to enter your channel.
- 5. Press ENTER when the correct channel number is entered.
- 6. Your screen will show
Channel Changed

Receiver Found
- 7. You will then automatically be taken into Presentation Mode

THE SETUP MENU:

Under the Setup Menu you have four options:

- User Data
- Contrast
- Battery
- Version

User Data—From this sub-menu you can View, Edit and Send User Information.

Contrast—From this sub-menu you can adjust the Contrast, using the YES button for a lighter screen and the NO button to make your screen darker.

Battery—From this sub-menu you can see how much battery life remains.

Version—From this sub-menu you can see which version of the XR ResponseCard Firmware you currently have loaded.